

# **HORN SYSTEM**

# **PARTS LOCATION**

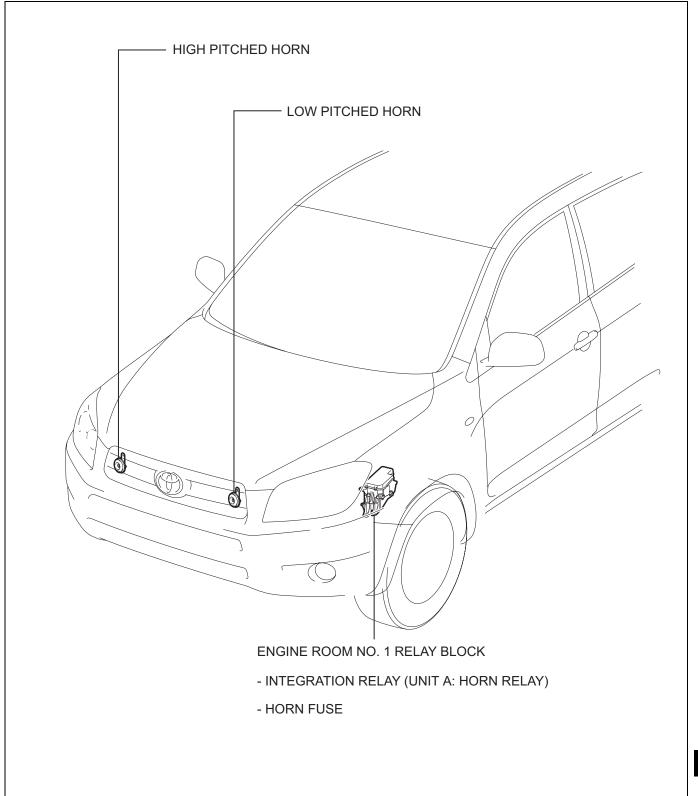

HO


B133647E02

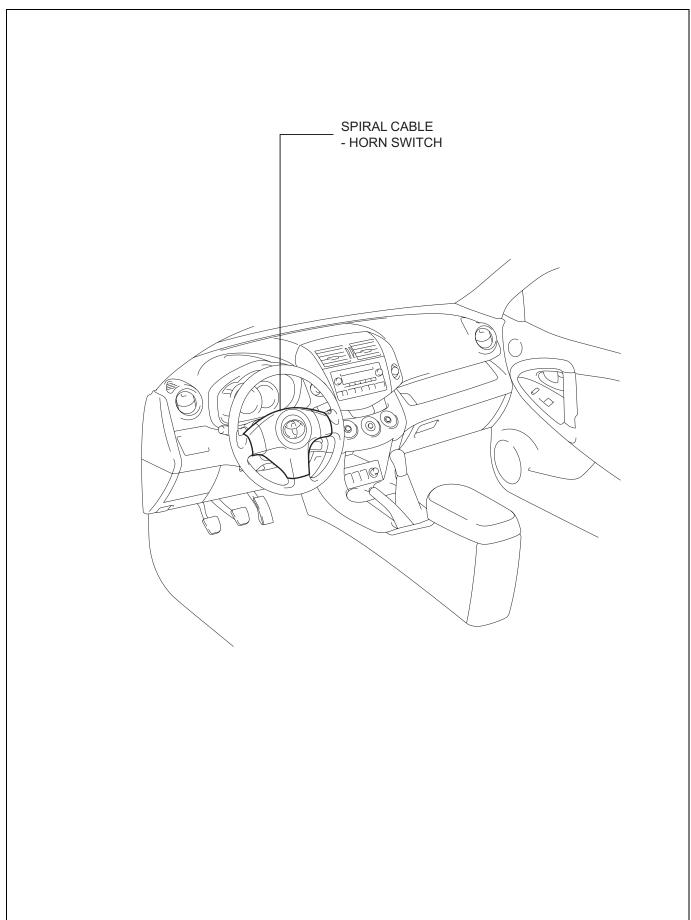

HO

B129494E01

### **SYSTEM DIAGRAM**

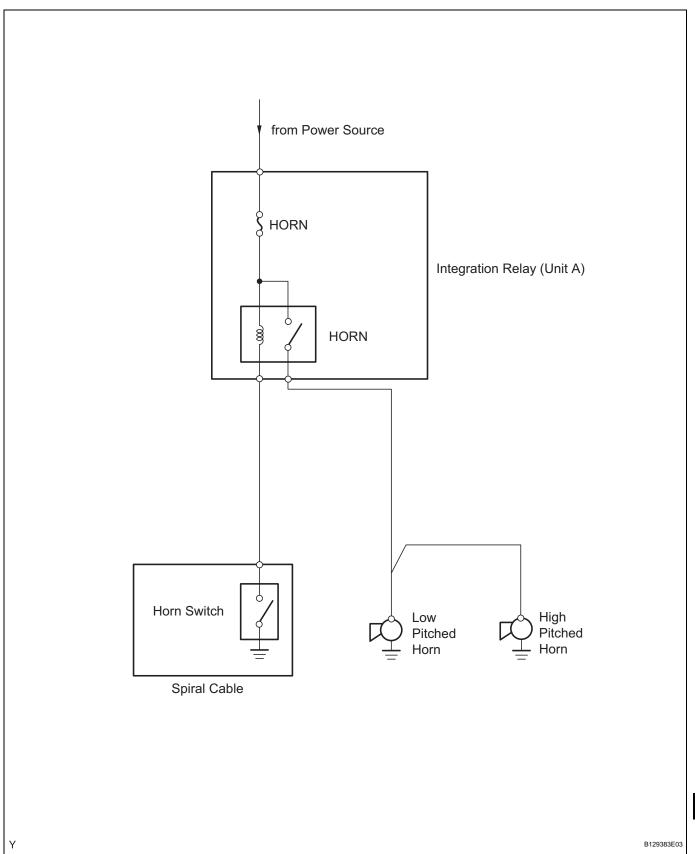

HO

### PROBLEM SYMPTOMS TABLE

#### HINT:

Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

### Horn system

Symptom	Suspected area	See page
Horn does not sound	1. HORN fuse	HO-1
	2. Integration relay (HORN relay)	HO-5
	3. High pitched horn	HO-9
	4. Low pitched horn	HO-7
	5. Spiral cable (horn switch)	-
	6. Wire harness	-

